

EK-00

Light capacity


FUNCTION



Ratchet system
spring adjustment



CE Mark available

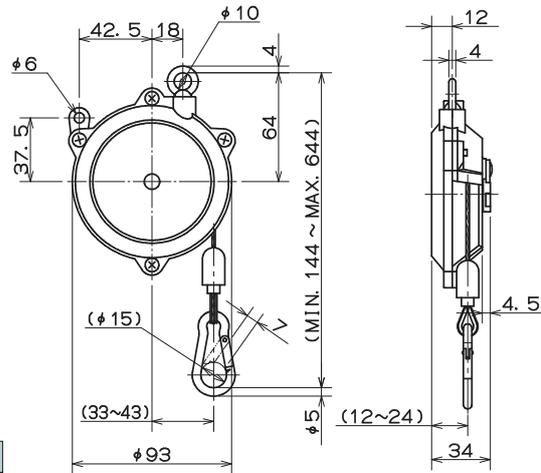

Model	Capacity(kg)	Travel(m)	Cable dia(φmm)	Mass(kg)
EK-00	0.5-1.5	0.5	2.0	0.2

EK-0

Light capacity


FUNCTION



Ratchet system
spring adjustment



CE Mark available

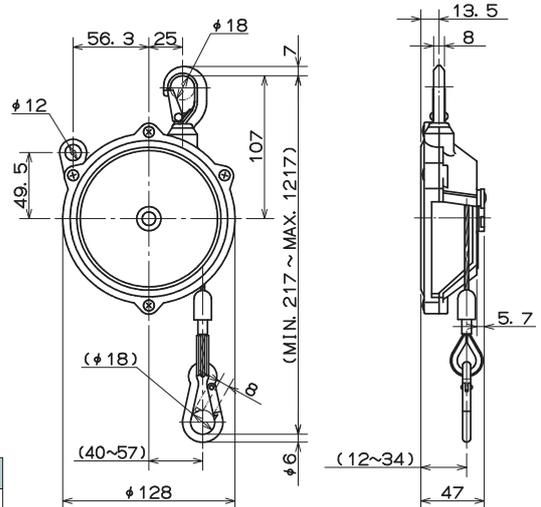

Model	Capacity(kg)	Travel(m)	Cable dia(φmm)	Mass(kg)
EK-0	0.5-1.5	1.0	3.0	0.5

ERP-06E/1E/2E

Light capacity


FUNCTION



Handle system
spring adjustment



CE Mark available

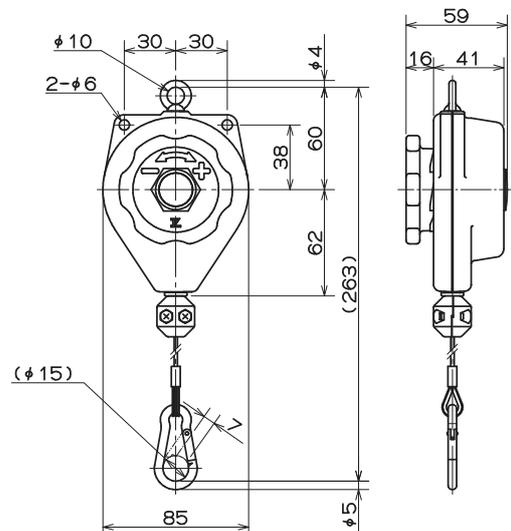

Model	Capacity(kg)	Travel(m)	Cable dia(φmm)	Mass(kg)
ERP-06E	0.3-0.6	1.5	2.0	0.4
ERP-1E	0.5-1.0	1.5	2.0	0.4
ERP-2E	1.0-2.0	1.5	2.0	0.4

* A nylon rope is employed for CE market instead of a nylon coated cable.

Selection of suitable model

Always use a suitable model meeting the total weight of suspended tool or instrument. The balancer should be selected considering the weight of the tool and accessories.

Installation

- Install Spring balancers uneven not to hit each other when the balancers are installed in a line.
- Always employ a secondary support chain and leave the slack for smooth swivel.
- Always adjust the spring tension to meet the total weight of tool and the application.